

STACKER – PLANTER SINGLE SWATH CONFIGURATIONS – OPERATORS MANUAL

PLB Australasia Pty Ltd trading as Liquid Systems (SA) - ph: +61 8 8357 4437
Contact information is available on the company website at www.liquidsystems.com.au
Originally published August 2011.

TABLE OF CONTENTS

1. IMPORTANT INFORMATION

ABOUT THIS MANUAL.....	1.1
SAFETY AND DAMAGE WARNINGS.....	1.1
IMPORTANT SAFETY INSTRUCTIONS	1.1

2. SPECIFICATIONS

ABOUT THE SYSTEM	2.1
SYSTEM COMPONENTS - Manifold Assembly Kit.....	2.2
SYSTEM COMPONENTS - Terminal Assembly Kit	2.3
MANIFOLD ASSEMBLIES & CONFIGURATIONS- Single	2.4
MANIFOLD ASSEMBLIES & CONFIGURATIONS- Dual	2.6
COMPLETE SYSTEM LAYOUT OVERVIEW— Planter	2.8

3. INSTALLATION

MOUNT INDUCTION FILTER.....	3.1
MOUNT MANIFOLDS	3.2
INSTALL PLUMBING	3.3
Connect Pressure Hose	3.3
INSTALL TERMINAL ASSEMBLIES	3.4
Select Line Meter Size.....	3.4
TERMINAL ASSEMBLIES	3.5
INSTALLATION TIPS.....	3.6
Check Valve.....	3.6
Line Meter	3.6
Terminal Tube.....	3.7
Rubber Union	3.7
ROUTE DELIVERY TUBE	3.8
INSTALL PRESSURE GAUGE.....	3.8

4. OPERATION & MAINTENANCE

FLUSH SYSTEM & CHECK OUTLETS.....	4.1
CHECK & CLEAN INDUCTION FILTER	4.1
EXTRACTING TERMINAL & DELIVERY TUBE	4.2
EXTRACTING LINE METERS	4.2

5. TROUBLESHOOTING

.....	5.1
-------	-----

6. REPLACEMENT PARTS

.....	6.1
-------	-----

Disclaimer

Information in this document is believed to be accurate and reliable. However, the manufacturer does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. The manufacturer reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof. The manufacturer's products are not designed, authorized or warranted to be suitable for use in applications where failure or malfunction can reasonably be expected to result in personal injury, death or severe property or environmental damage, or disruption to operation of a business. The manufacturer accepts no liability for inclusion and/or use of its products in such equipment or applications and therefore such inclusion and/or use is for the customer's own risk.

ABOUT THIS MANUAL


This manual includes instructions for installation, operation, maintenance and troubleshooting of a Stacker Distribution System.


All dimensions shown in this manual are in millimetres.

SAFETY AND DAMAGE WARNINGS

The terms WARNING, CAUTION and NOTE are used throughout this manual to stress the importance of personal safety, potential machinery damage and useful operating information.

Term description and usage is shown below.

 **WARNING:** Indicates the strong possibility of severe personal injury or damage to machinery if instructions are not followed.

 **CAUTION:** Highlights hazards, unsafe or unwise practices which could cause personal injury, property damage, damage to your machinery or loss of potential crop yield if instructions are not followed.

 **NOTE:** Refers to important and useful information which should not be overlooked.

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

Always wear protective gloves, eyewear and clothing when dealing with liquid fertilizers and other liquid agricultural products.

Do not disconnect any hose lines while the pump is running.

Ensure power is switched off or disconnected when connecting or disconnecting any electrical components of the system.


WARNING:

Use of phosphoric acid with this equipment will void the warranty.

ABOUT THE SYSTEM

Stacker Distribution Systems have been designed to provide accurate and even rate controlled application of clear liquid fertilizers and other high analysis agricultural liquids.

Distribution systems include all items necessary from induction to delivery to the opener tubes. Systems do not however include the stainless steel opener delivery tubes - (as many Air Tool shanks already feature these). Each system also includes support kit that includes spares, cutting & extraction tools etc.

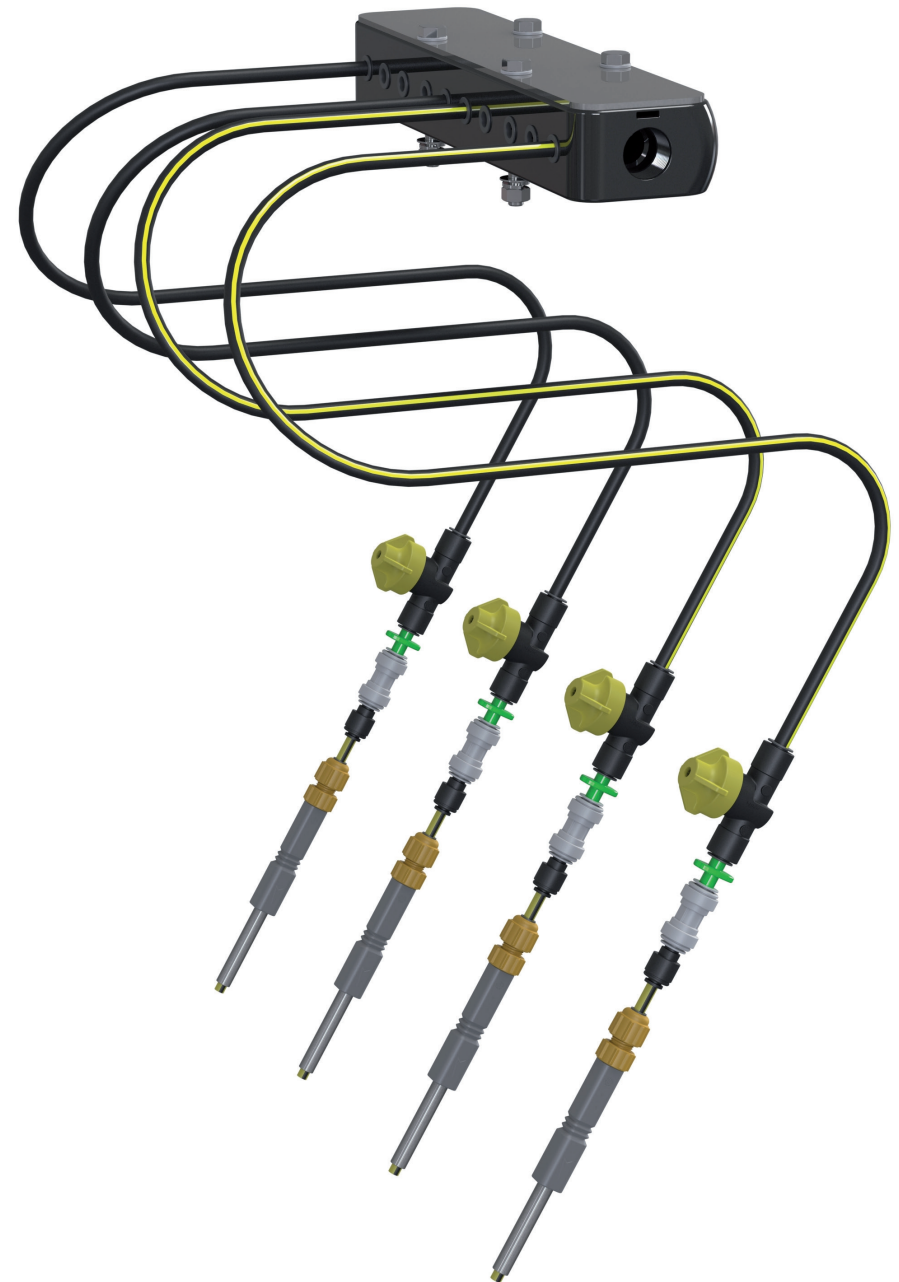

SYSTEM COMPONENTS - Manifold Assembly Kit

Single Stacker Manifold



Dual Stacker Manifold




NOTE: EACH MANIFOLD IS LABELLED WITH A CODE NUMBER - FOLLOW THE CODES ON PAGE 2.4 FOR SINGLE CONFIGURATION AND PAGE 2.6 FOR DUAL CONFIGURATION.

Universal Manifold Mounting Assembly



Induction Filter Assembly

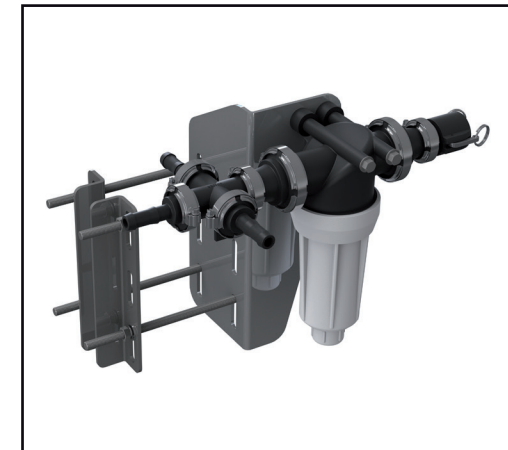

Stacker Pressure Gauge Assembly



8mm OD Delivery Tube




SINGLE	DUAL
M1 - 100m	M1 - 200m
M2 - 200m	M2 - 400m
M3, M4 - 300m	M3, M4 - 600m
M5, M6 - 400m	M5, M6 - 800m

3/4" Pressure Hose



SINGLE	DUAL
M1 - NA	M1 - NA
M2, M3, M4 - 30m	M2, M3, M4 - 60m
M5, M6 - 40m	M5, M6 - 80m

Wormscrew Clamp

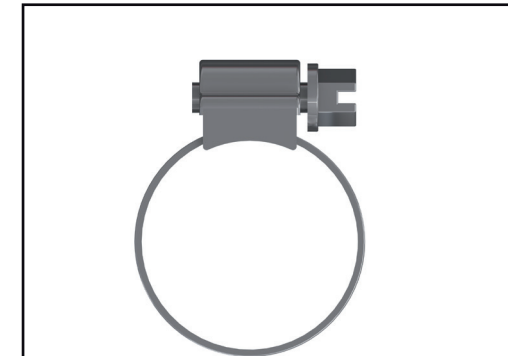

SINGLE	DUAL
M1 - NA	M1 - NA
M2 - 4	M2 - 12
M3 - 10	M3 - 20
M4 - 8	M4 - 20
M5 - 14	M5 - 28
M6 - 14	M6 - 28


NOTE: INSTALLATION TIPS ON PAGE 3.2

SYSTEM COMPONENTS - Terminal Assembly Kit

6, 5, or 4mm OD Terminal Tube



Cable Ties

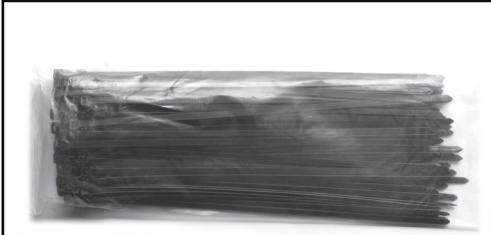

SINGLE	DUAL
M1 - 1PK	M1 - 2PK
M2, M3, M4 - 2PK	M2, M3, M4 - 4PK
M5, M6 - 3PK	M5, M6 - 6PK

Components Pack










Customer Support Kit - contains spare components and tools




 **NOTE:** INSTALLATION TIPS ON PAGE 3.4








PLANTER STACKER MANIFOLD ASSEMBLIES - Single

PART IMAGE	PART NO.	PART QUANTITY PER SYSTEM					
		M1	M2	M3	M4	M5	M6
	LL08059	1					
	LL08065		1		1	1	1
	LL08066		1		1	1	1
	LL08070			1		3	2
	LL08071				2		2
	LL08146			1			
	LL08147			1			

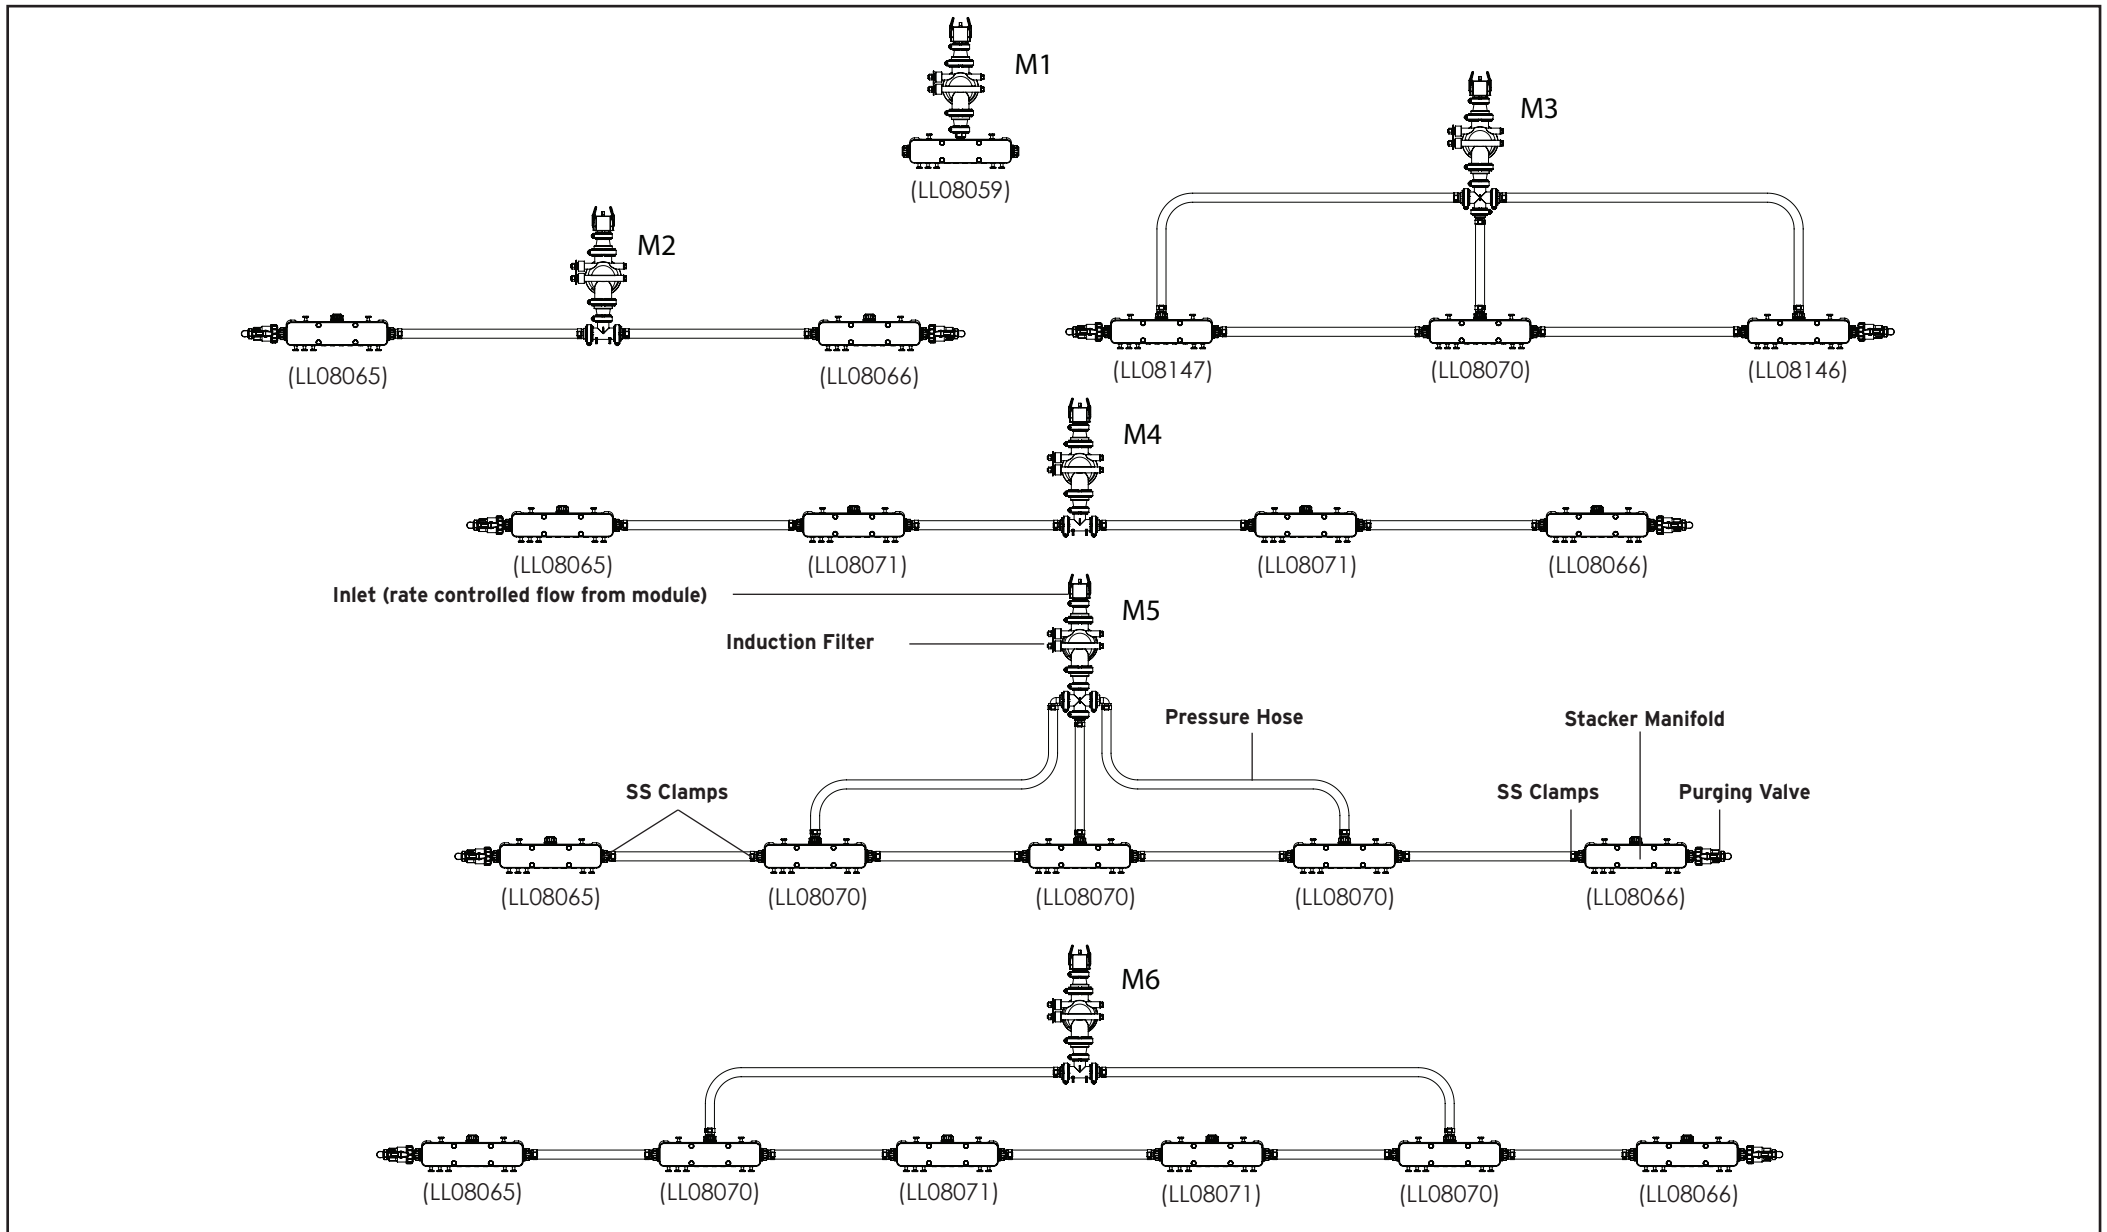
MANIFOLD LAYOUT CONFIGURATIONS - OVERVIEW - Single




PLANTER STACKER MANIFOLD ASSEMBLIES - Dual

PART IMAGE	PART NO.	PART QUANTITY PER SYSTEM					
		M1	M2	M3	M4	M5	M6
	LL08059	2					
	LL08076				1	1	1
	LL08077				1	1	1
	LL08078			1	2	3	2
	LL08152		1	1			
	LL08153		1	1			
	LL08164						2

MANIFOLD LAYOUT CONFIGURATIONS - OVERVIEW - Dual

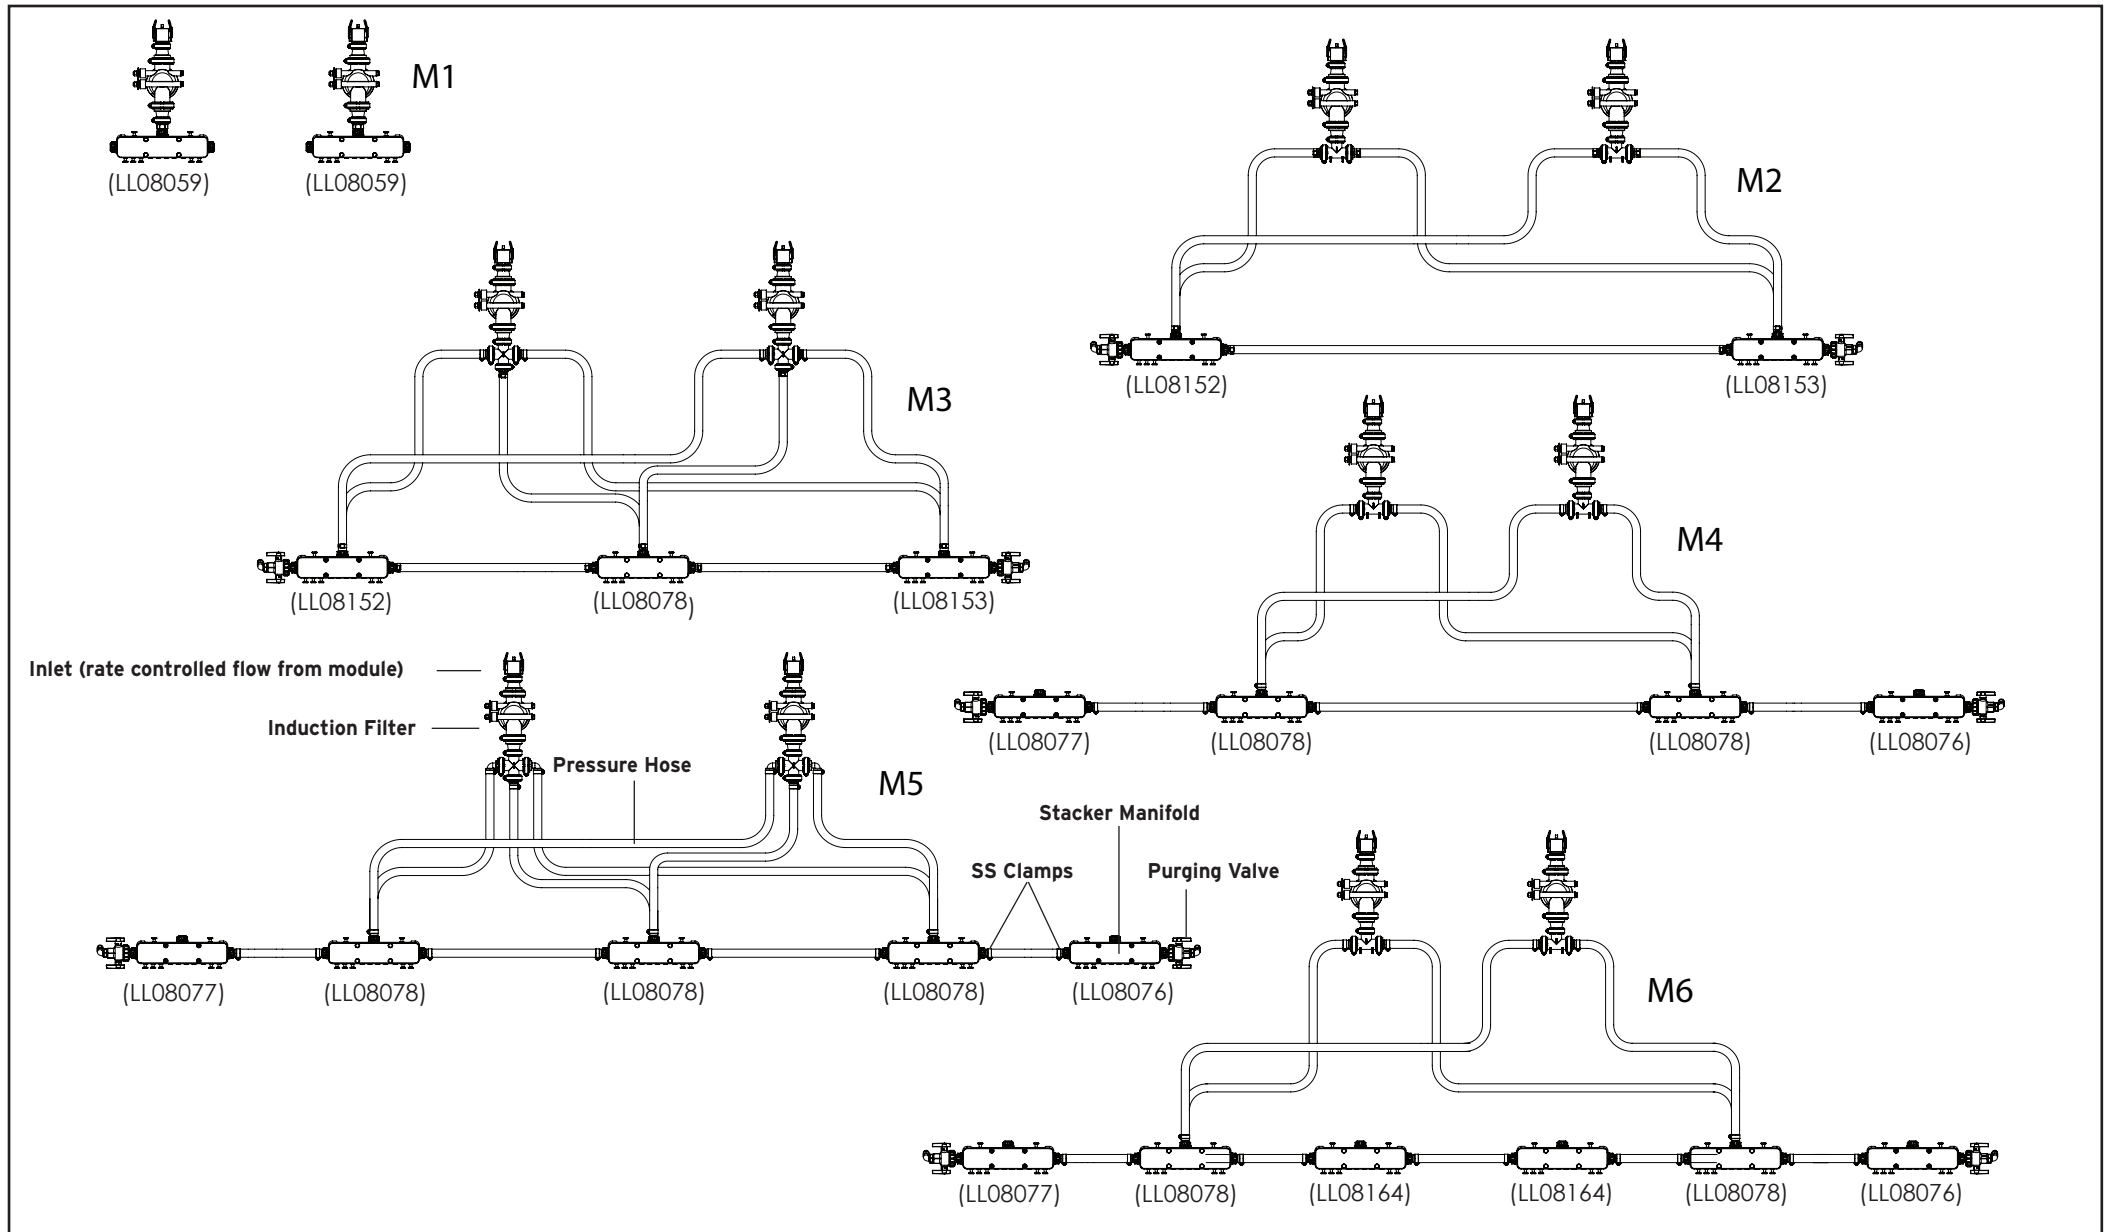

COMPLETE SYSTEM LAYOUT – Example: M3 Single Swath Single System

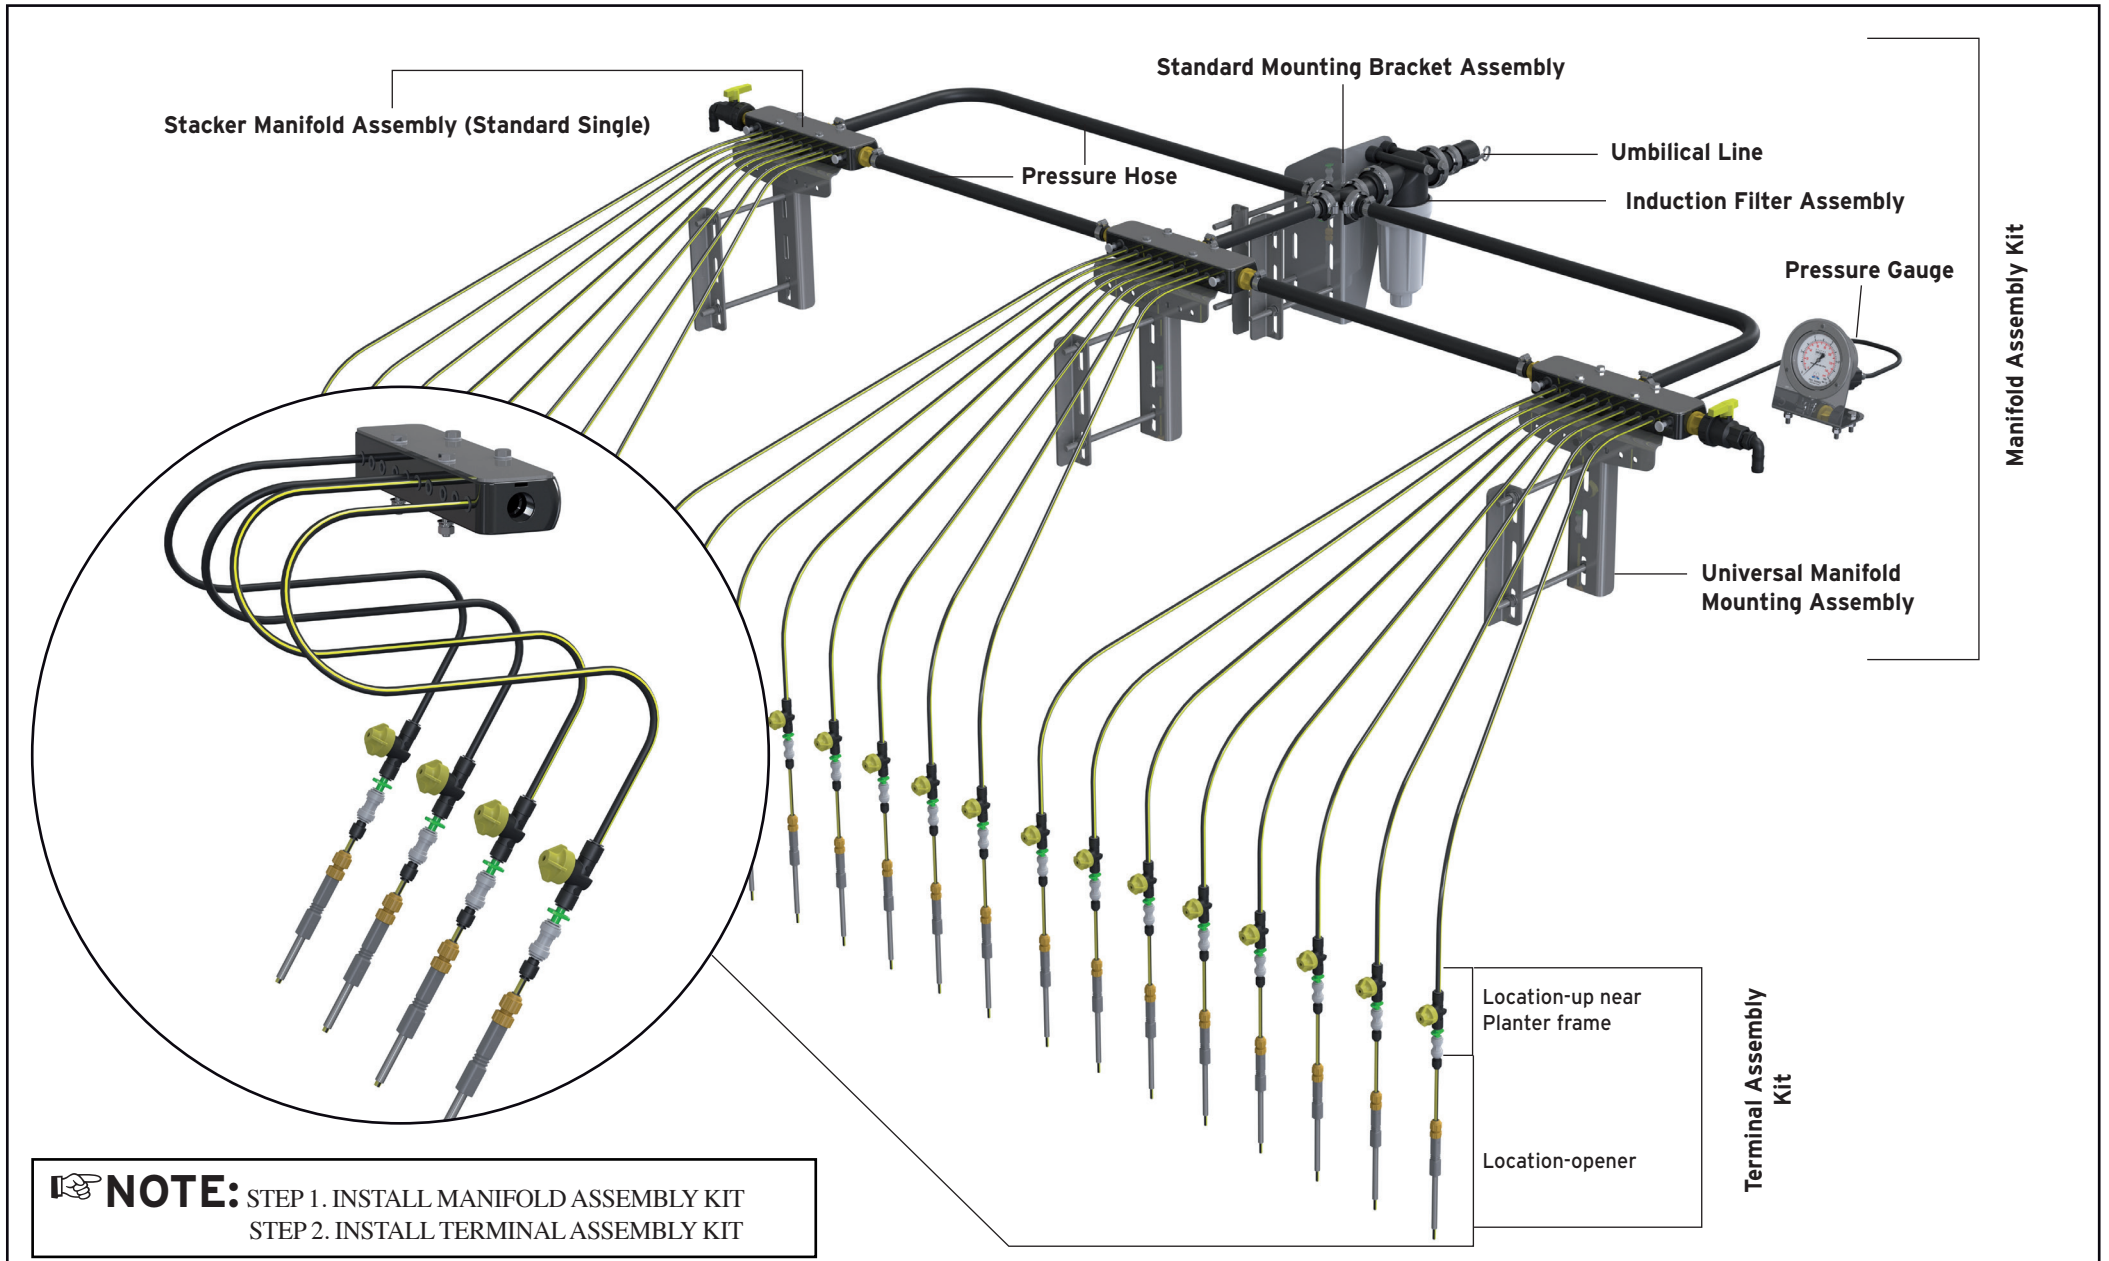

MOUNT INDUCTION FILTER


The Induction Filter needs to be mounted on an existing implement such as a tillage bar, Air Tool or Planter. The most suitable location for mounting the module will depend on the implement.

Factors to consider when selecting a mounting location.

- Ensure the location of the Induction Filter does not interfere with functionality of implement. E.g. folding sections, filling bin tanks
- Routing of umbilical line.

Use mounting assembly supplied for installation.

Universal Induction Filter Mounting

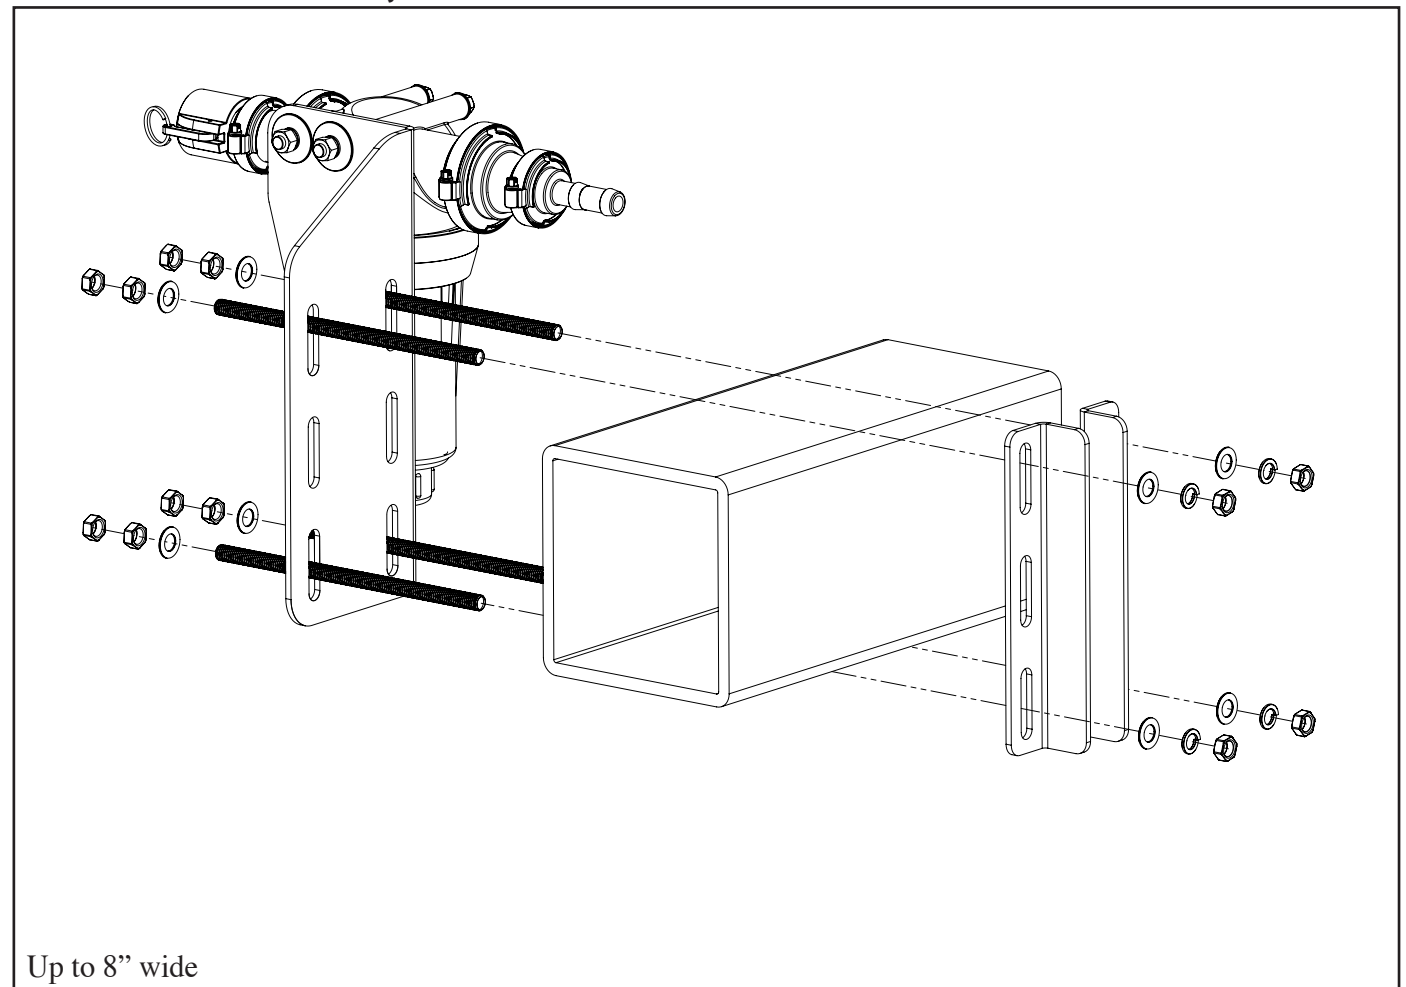

MOUNT MANIFOLD ASSEMBLIES



Mount manifold assemblies using brackets provided as shown below.

Refer to configuration layouts on pages 2.5 (single systems) and 2.7 (dual systems).


Mounting location Tips:

- Minimise routing distance to openers.
- Ensure folding of implement will not damage the manifold, pressure hose or delivery tube.
- Ensure manifolds and mounting brackets will not interfere with movement of tyne or disc openers.

1. Mount Stacker Manifold to mounting bracket.

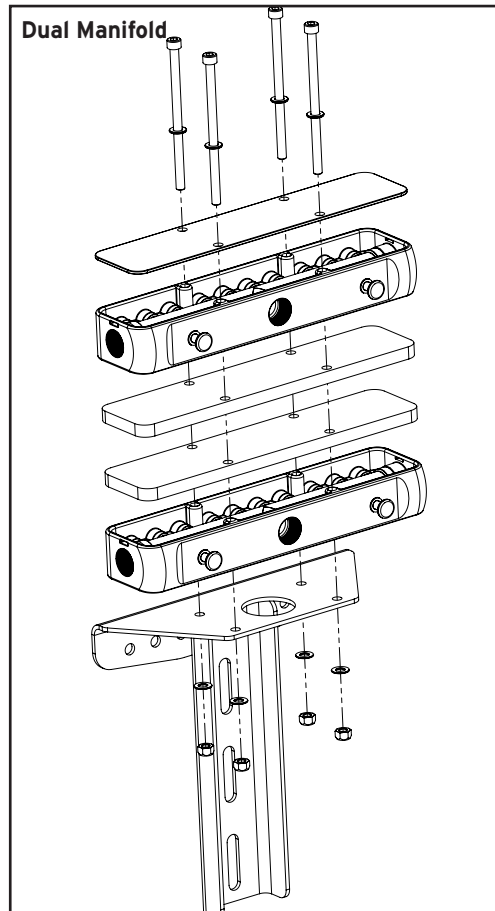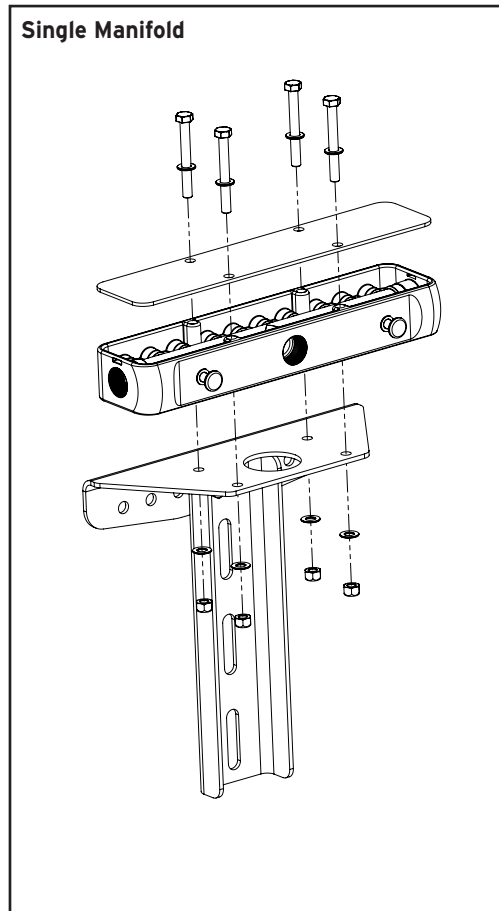

2. Mount mounting bracket to implement bar.

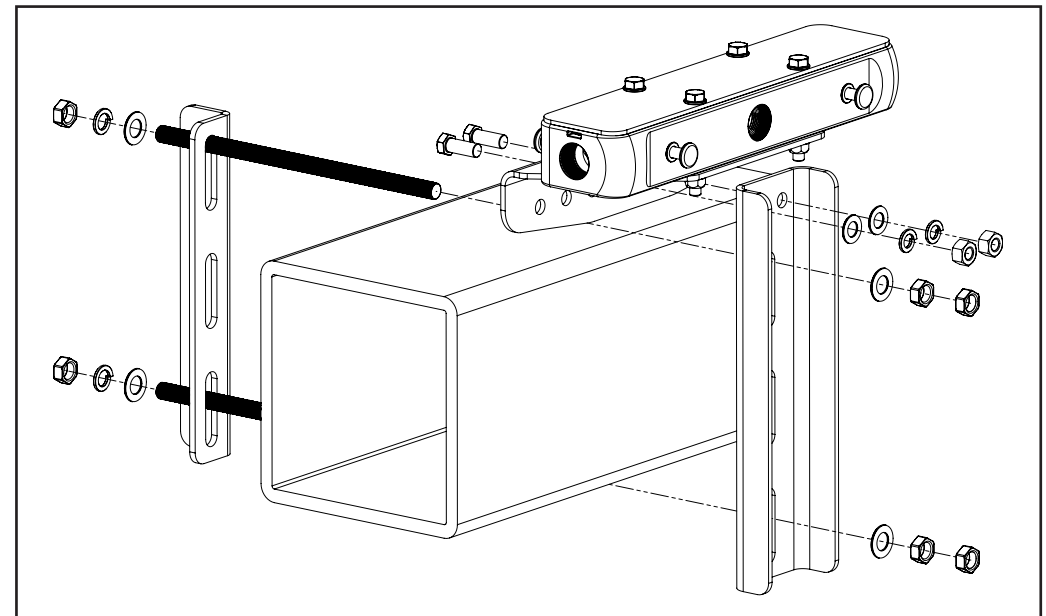


INSTALL PLUMBING

Connect Pressure Hose

1. Route 20mm (3/4") pressure hose from Induction Filter to manifolds and between manifolds as per layout diagram. Ensure hose will not be kinked or crushed when implement folds.
2. Use cable ties supplied to secure hose into place. Attach hose to Induction Filter and manifold hose barbs with hose clamps provided.

NOTE: WHEN CUTTING HOSE ENSURE A STRAIGHT CLEAN CUT.

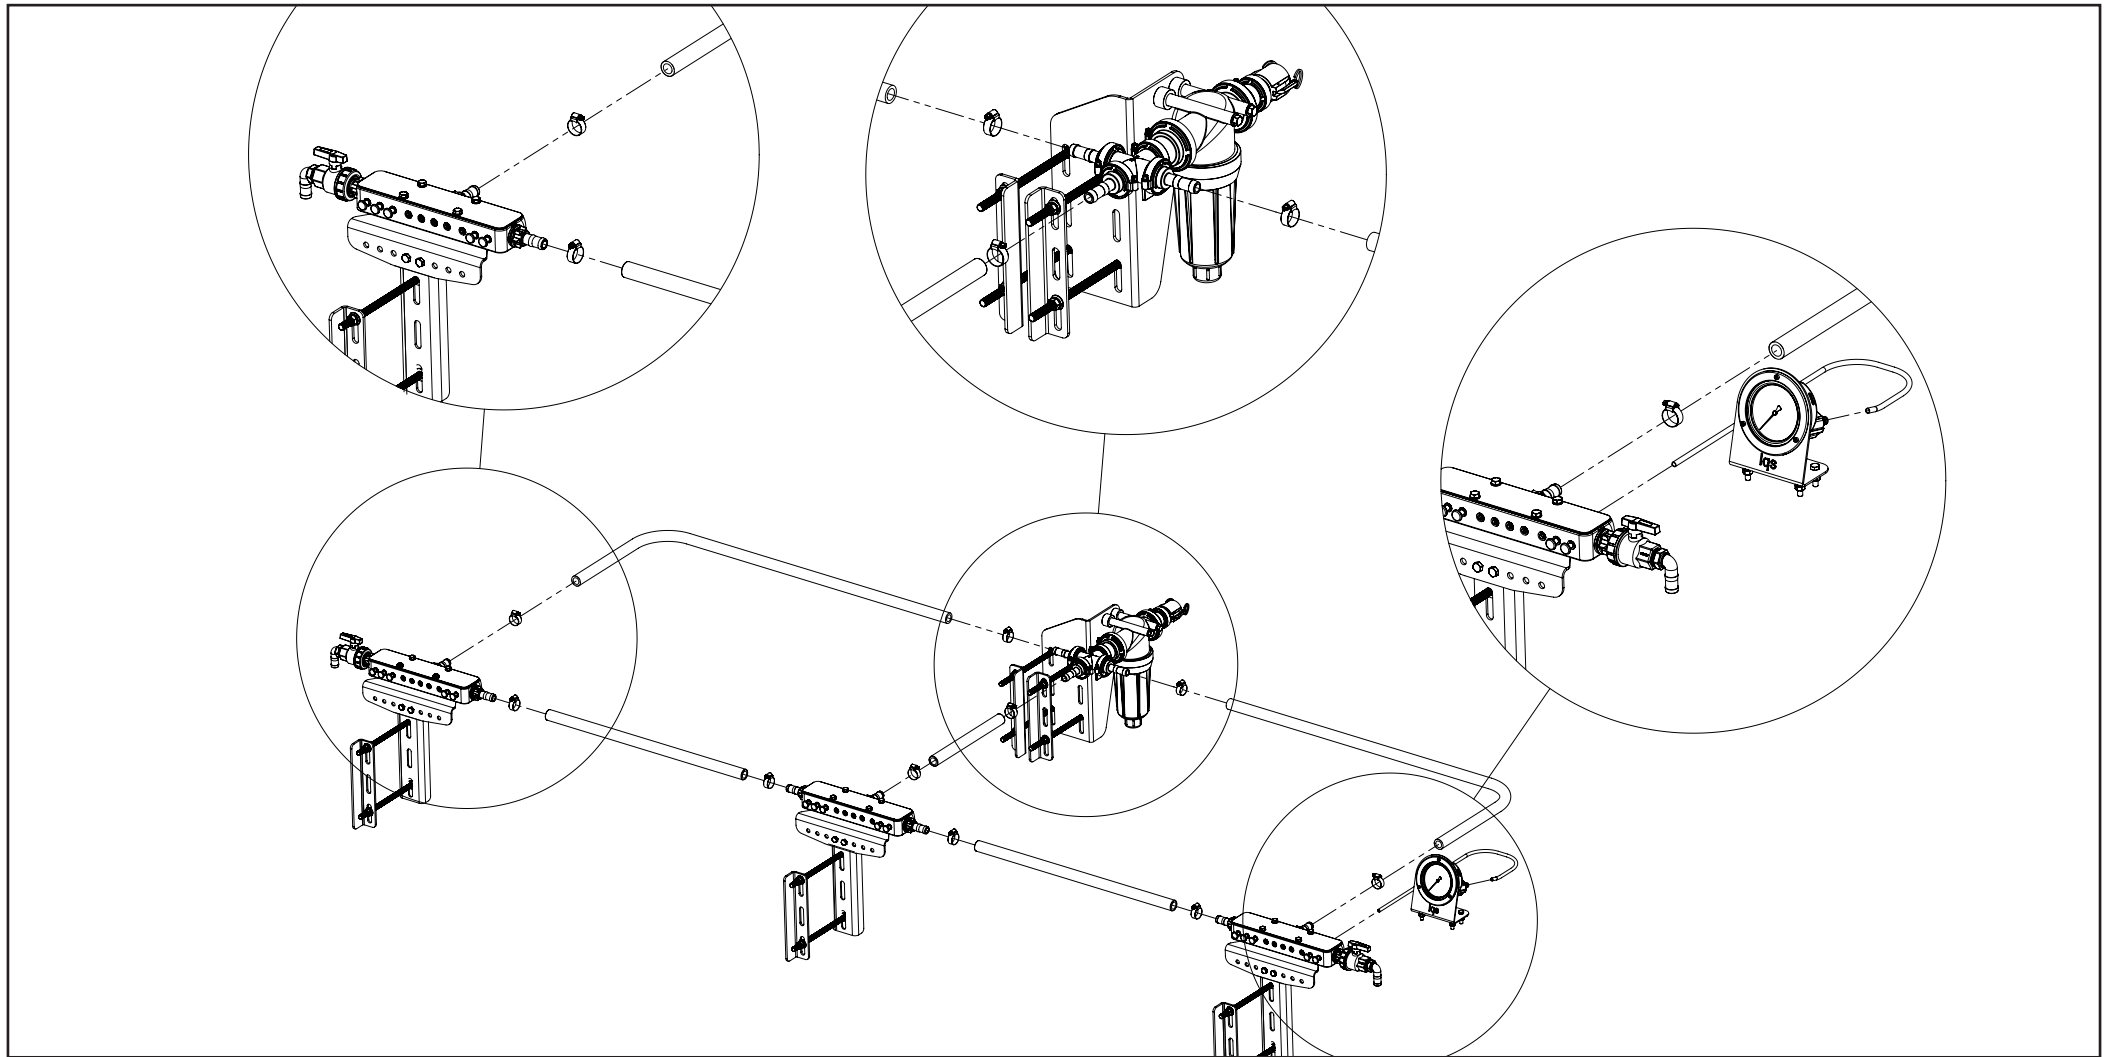


INSTALL TERMINAL ASSEMBLIES

Line Meters are a fixed size orifice that can be used with 8mm push-in fittings. They come in a range of orifice sizes from 0.55 to 2.5 mm. These restrictive devices create a system back pressure that ensures equal application of liquid product at each outlet across the tool bar.

It is important to install restrictive devices that are suitable for the range of application rates and operating speeds for the intended cropping program to ensure the system is operating at a suitable pressure. **The system operates best at pressures between 1 and 6 bar (14 to 90 psi).**

Line Meters

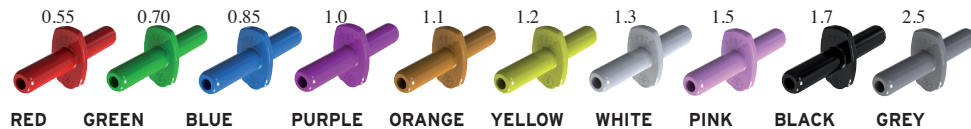

NOTE: Liquids with high viscosity may require a larger size line meter.

Different liquid products can flow at very different pressures for the same restrictive device due to differences in viscosity and density.

Calculate range of flow required out of each outlet by using the following formulae. Calculate minimum flow using **lowest** target application rate and **slowest** ground speed required. Calculate maximum flow using **highest** target application rate and **fastest** ground speed required.

Metric

$$\frac{W \times R \times S}{600 \times N} \text{ L/min}$$

Where:

W is width of bar in metres

R is rate in L/Ha

S is operating ground speed in km/h

N is number of outlets

US

$$\frac{W \times R \times S \times 128}{495 \times N} \text{ fl-oz/min}$$

Where:

W is implement width in feet

R is rate in US Gal/Acre

S is operating ground speed in MPH

N is number of openers

Look up resistance charts to identify Line Meter size or Friction Tube length that is most suitable for the identified flow range and the intended product. Water added to liquid products will normally reduce the operating pressure.

It is better to overestimate friction tube length than cut lengths that are too short.

NOTE: DOWNLOAD OUR FLOW DATA FROM: www.liquidsystems.com.au/technical/flow-charts/


INSTALL TERMINAL ASSEMBLIES

Assemble & Install Terminal Assemblies

Install liquid ready points or stainless steel terminal tubes prior to installing Terminal Assemblies. Whether using liquid ready points or attaching after market or custom stainless steel terminal tubes, consult with an agronomist to determine optimal point of delivery for the liquid products being applied.

Assemble and install Terminal Assemblies on openers as shown. Use cable ties provided in support kit to secure assemblies in place.

Planter Terminal Configurations

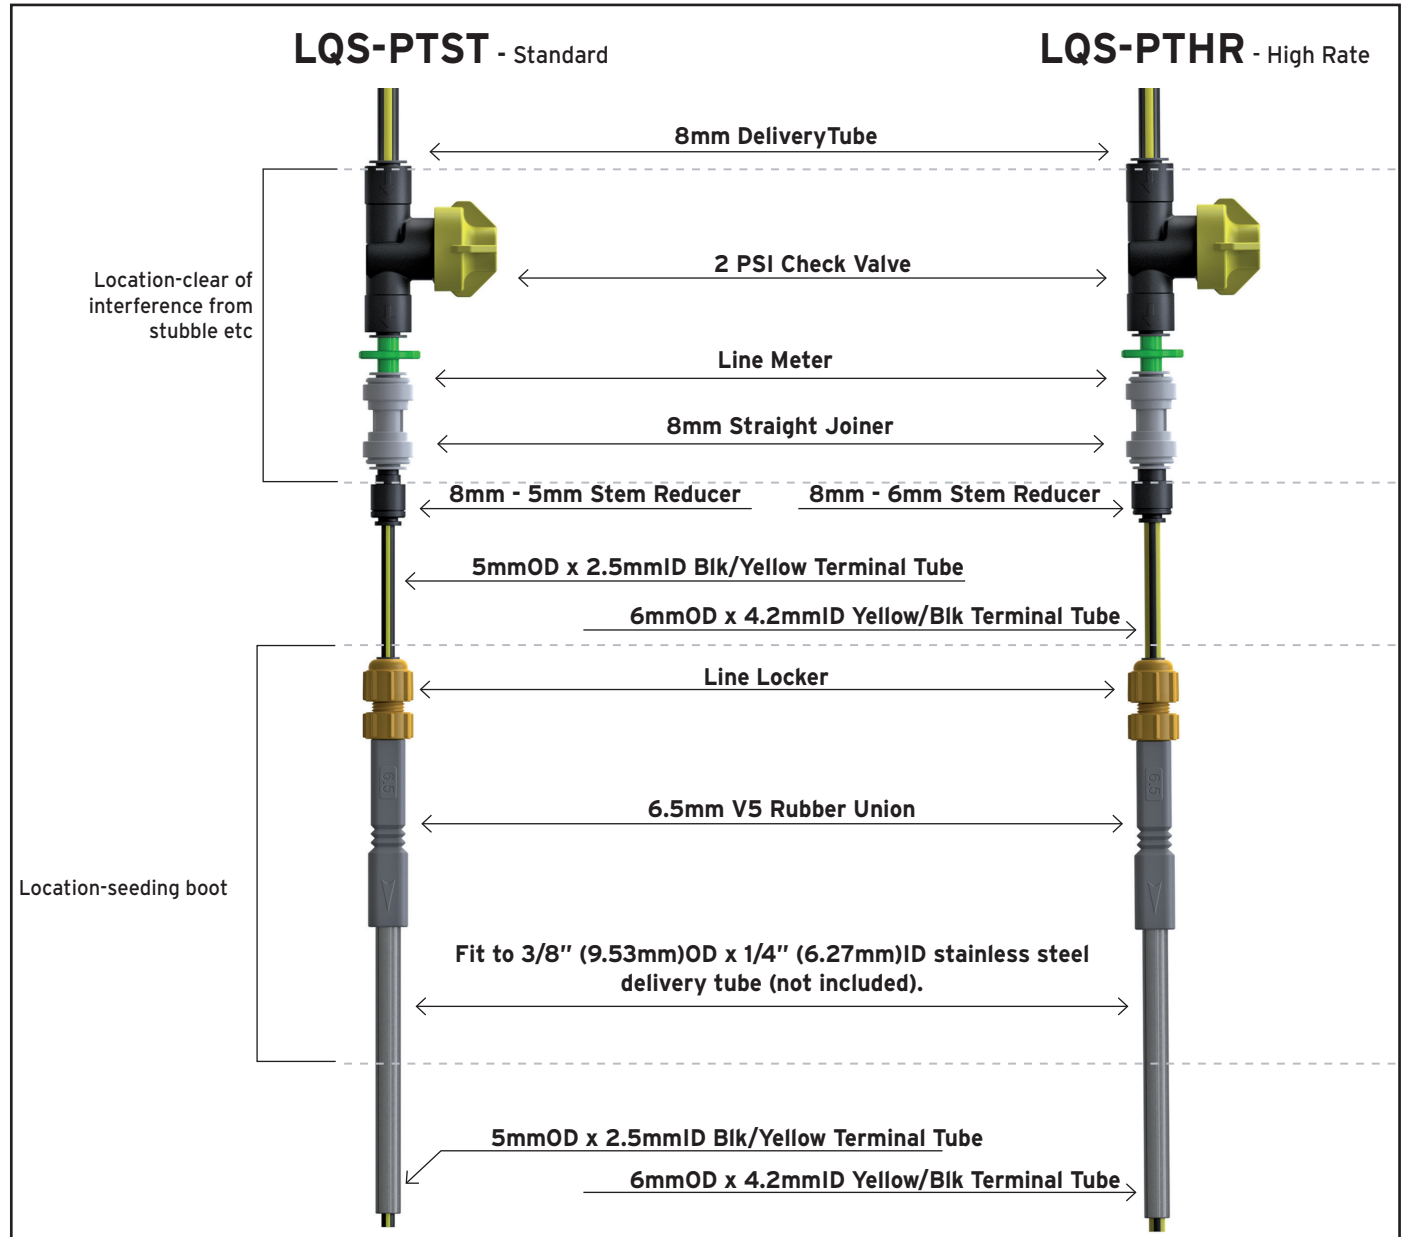

NOTE: IMPORTANT INSTALLATION TIPS ON NEXT PAGE.

NOTE: Each terminal configuration is different. It is important to follow the required assembly closely.

INSTALLATION TIPS

Check Valve

- When possible place Check Valve along air hose. Install Check Valves at an appropriate height to minimise dirt and debris. **(Image 1.)**
Build up of dirt on the check valve cap will prevent it from functioning correctly.
- Arrows on check valve must point in direction of flow. **(Image 2.)**
- Use Check Valve Saddle to hold valve firmly in position on air hose. **(Image 2.)**



Check Valve Boot

- Install Check Valve Boot by stretching over check valve cap. **(Image 3.)** Ensure boot is fully expanded by pulling boot out sideways to ping it into shape.



Line Meter

- Fit all line meters in the same direction. Line meter size marking should be on the upstream side of the central tab. **(Image 4.)**
- Leave 5mm gap between central tab and check valve. This makes it easier to use separator tool Type 2 to change line meters. **(Image 5.)**

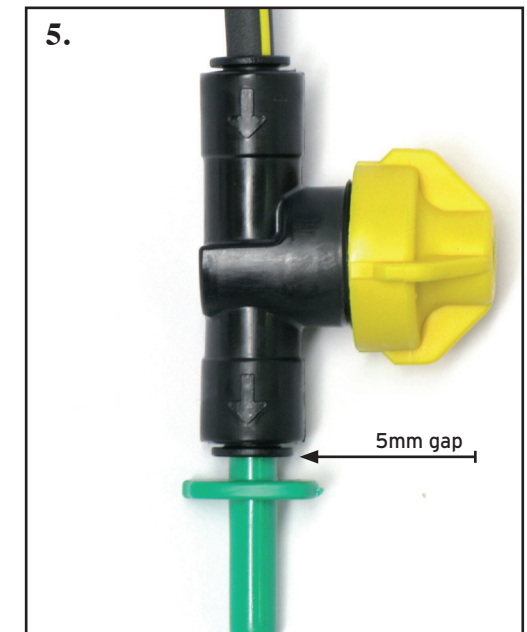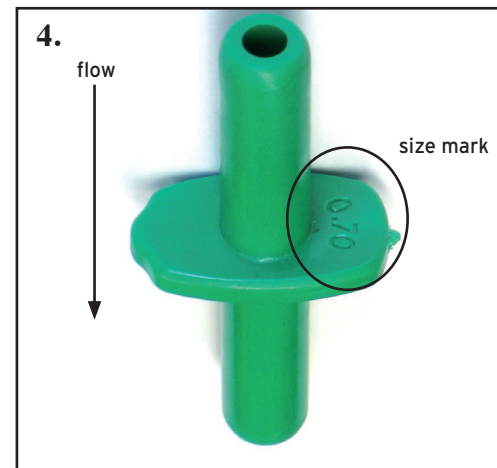

NOTE:
MUST READ ALL TIPS



INSTALLATION TIPS

Terminal Tube

- For optimal stream control push polyethylene terminal tube all the way through steel delivery tube. **(Image 6.)**
- Always use tube cutter supplied in Support Kit to cut straight across delivery & terminal tube. It will ensure clean non distorted tube ends. **(Image 7.)**
- Chamfer the tube end after cutting using the pencil sharpener provided. (This allows easier fitment into push-in fittings.) **(Image 8.)**

Rubber Unions



- Place a few drops of detergent in the end of the rubber union before fitting to steel delivery tubes or polyethylene terminal tube. **(Image 9.)**

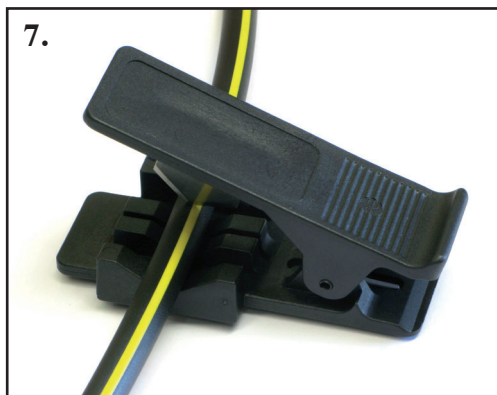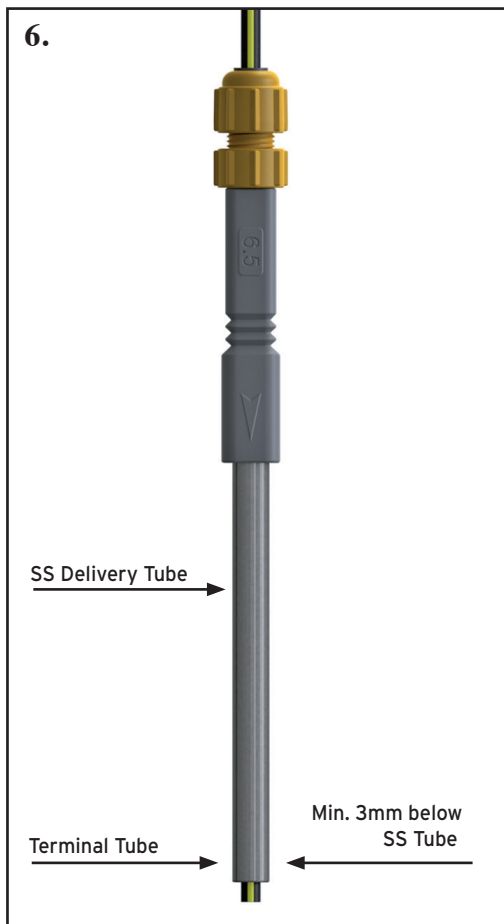

NOTE: HIGH IMPORTANCE
Images 7, 8 & 9.

ROUTE DELIVERY TUBE

Route 8mm delivery tube from Manifolds to Terminal Assemblies. (Image 1,2)

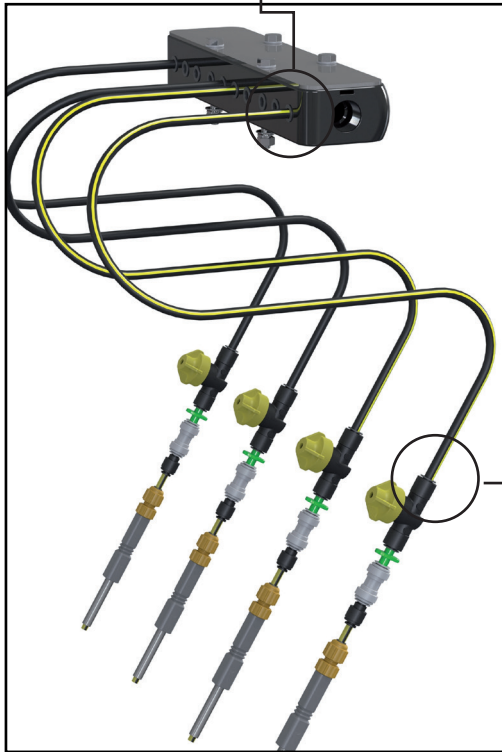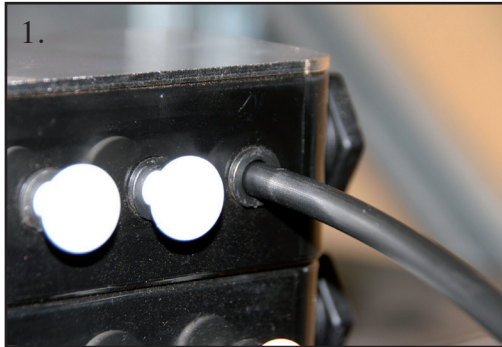


NOTE: Always use tube cutter supplied in Support Kit to cut terminal tube. It will ensure clean non distorted tube ends. Chamfer the tube end after cutting using the pencil sharpener provided. See Installation Tips on previous page.

INSTALL PRESSURE GAUGE

Select a suitable mounting location for the gauge so it is visible from the tractor cab. Use fasteners and bracket provided to mount gauge in chosen location.

Connect gauge via 8mm delivery tube to the gauge port on one of the Stacker Manifolds.

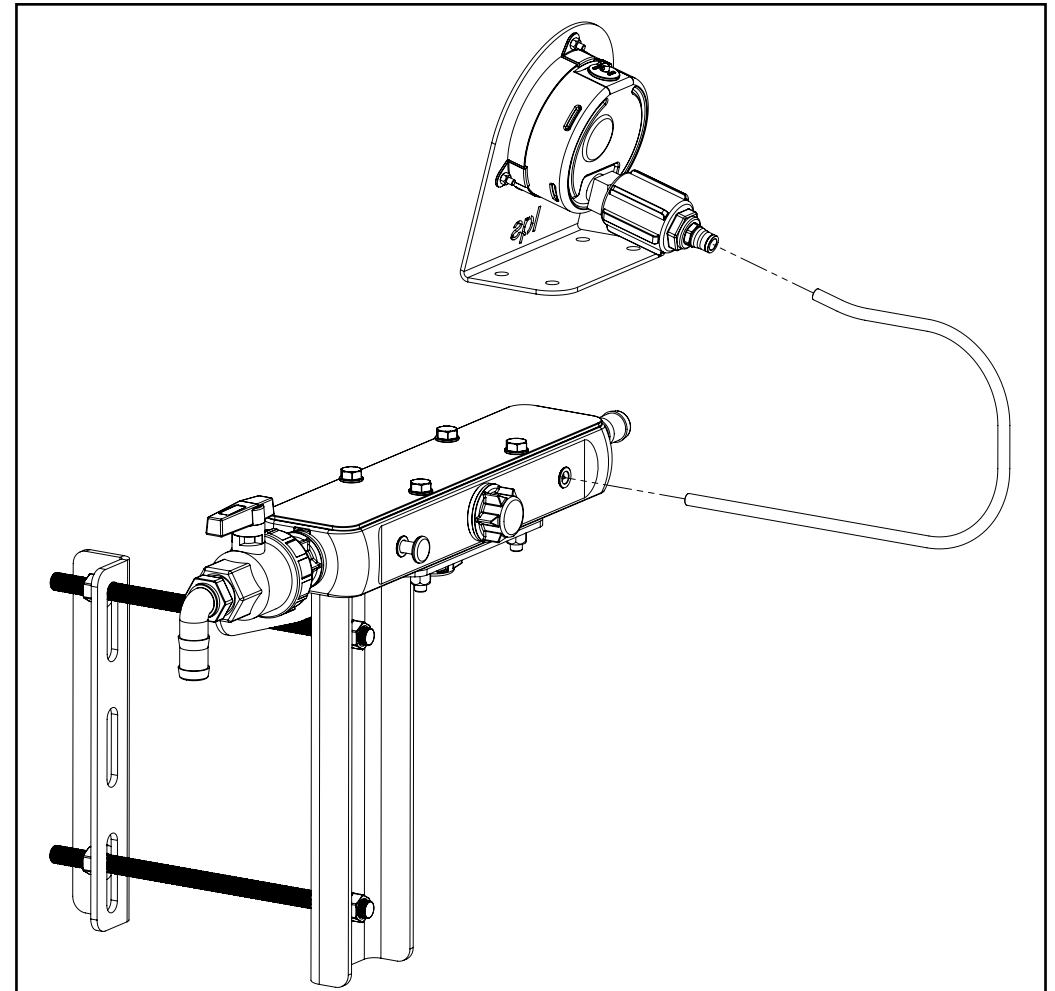

FLUSH SYSTEM & CHECK OUTLETS

- Frequency:
- Prior to initial use.
 - When in use, once daily.
 - When the system is to be shut down for an extended period.

More frequent flushing may be required depending on products being applied and operating conditions.

Use your Liquid Systems Rate Control Module to flush the system with clean water. Refer to your Rate Control Module manual for details. For optimal results flush system at a pressure of approx 6 bar.

Alternatively flush system with clean water from an external water source.

Check all outlets are working and clear any blockages. (See how to extract line meters correctly on page 4.2)

CHECK & CLEAN INDUCTION FILTER

Frequency - twice daily when system is in operation.

1. Unscrew filter bowl from body.
2. Inspect and clean/rinse screen. Replace screen if damaged.
4. Check seating of O ring.
5. Replace screen and screw bowl back into place.
6. Apply Vaseline to thread to improve seal and make task easier.

Refer to the spare parts section of this manual for replacement parts.

WARNING: Liquid will escape from the filter during this process. Ensure suitable protective gloves and clothing are worn when performing this task.




EXTRACTING TERMINAL AND DELIVERY TUBE

The best way to extract tubing from push-in fittings and check valves is to use the extraction tool (Type 1) provided in the support kit.



(Use the Compression Tool to depress the Locking Collets on the STACKER Manifold quick release insert cartridges when inserting or extracting the 8.0mm PE tubing.)

Use the extraction tool to depress the collet by pushing forward. Pull the tube back while the collet is still depressed. See image below. Inset shows collet.

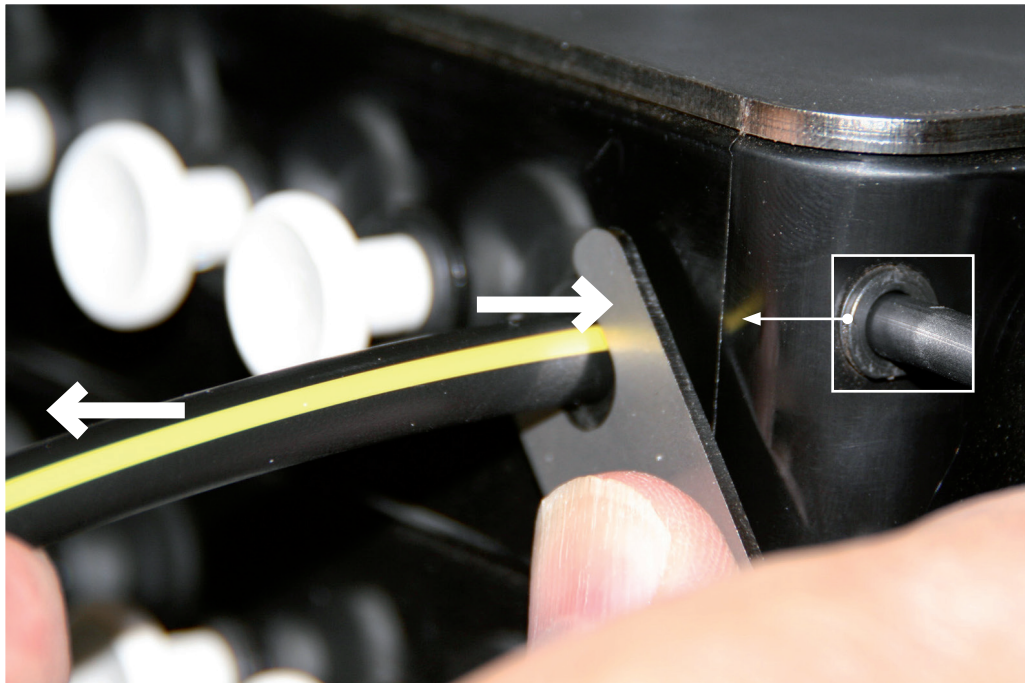

EXTRACTING LINE METERS

When checking line meters, the best way to extract them from push-in fittings and check valves is to use the extraction tool (Type 2) provided in the support kit.



Insert tool between line meter tab and push-in fitting or check valve. Squeeze handles to depress the collet of the push-in fitting and release line meter.



⚠ WARNING: Failing to depress collet when removing tube or line meter will damage the manifold or fitting.

PROBLEM	POSSIBLE CAUSE	RESOLUTION
System pressure is too low. i.e. < 0.5bar (< 7psi)	Output rate is too low to produce reasonable pressure with the line meters in use.	Replace line meters with a smaller size. Increase operating speed. Dilute liquid product and apply at a higher rate.
	Flow meter calibration may be incorrect.	Recalibrate flow meter of rate control system.
Sudden drop in system pressure.	Some part of the Stacker system has been damaged and is leaking	Stop product application immediately. Check for leaks while doing a system flush.
System pressure is too high.	Outlets have become blocked.	Perform system flush and check for blocked outlets.
	Line meter orifice size is too small for the rates being applied.	Replace installed line meters with line meters with a larger orifice size.
	Flow meter calibration may be incorrect.	Recalibrate flow meter of rate control system.
	Induction filter has become blocked and needs cleaning.	Unscrew body of induction filter, clean filter screen and replace.
Liquid continues to dribble out of some outlets when liquid application is switched off.	Check valves aren't functioning correctly.	Remove cap on check valve. Clean cap thoroughly to remove any dirt build up. Check valve diaphragm is intact and replace if damaged. If valve spring is not functioning correctly, replace cap.

PART	PART NO.	DESCRIPTION
	BJ-FC100	1" Flange Clamp
	BJ-M100G	1" EPDM Gasket ('O' ring)
	JG-PPM0208W	Equal Tee 8mm
	JG-PPM0408W	Equal Joiner 8mm
	JG-PPM0808W	Plug 8mm
	JG-PM060804E	Stem Reducer OD 8mm-OD 4.0mm
	JG-PM060805E	Stem Reducer OD 8mm-OD 5.0mm
	JG-PM060806E	Stem Reducer OD 8mm-OD 6.0mm
	JG-PM0610080E	Stem Reducer OD 10mm-OD 8.0mm
	BJ-M100075BRB	1" Flange x 3/4 " Hose Barb
	JG-5-16SCV	5/16" Single Check Valve



PART	PART NO.	DESCRIPTION
	JG-PM2308E	8mm Two Way Divider
	JG-PM2310E	10mm Two Way Divider
	JG-PM1210E	10mm Bulkhead Connector
	BJ-M100075FPT	1" Flange x 3/4" Female Thread
	BJ-MCV100	1" Flanged Check Valve
	JG-PPMSV040808W	8mm Shut-off Valve
	BJ-UV075FP	3/4" Single Union Ball Valve
	LL08001	In Line Check Valve
	L08050	Check Valve Elastomer Boot
	TJ-21950-2-NYB	TeeJet 2 PSI End Cap
	TJ-CP21953-VI	Diaph. Viton 21950

PART	PART NO.	DESCRIPTION
	BJ-HB075-90	90° Elbow 3/4" Male Thread x 3/4" Hose Barb
	BJ-HBT075	3/4" Hose Barb Tee
	LQ-LM055RED	0.55mm Red Line Meter
	LQ-LM070GRN	0.70mm Green Line Meter
	LQ-LM085BLU	0.85mm Blue Line Meter
	LQ-LM100PUR	1.0mm Purple Line Meter
	LQ-LM110ORN	1.1mm Orange Line Meter
	LQ-LM120YEL	1.2mm Yellow Line Meter
	LQ-LM130WHI	1.3mm White Line Meter
	LQ-LM150PNK	1.5mm Pink Line Meter
	LQ-LM170BLK	1.7mm Black Line Meter
	LQ-LM250GRY	2.5mm Grey Line Meter
	LL08212	Line Locker

PART	PART NO.	DESCRIPTION
	L08077	6.5mm V5 Rubber Union to suit 9.53mm (3/8") SS Tube <i>SS 8.75 ID -- LL 8.9 ID</i>
	L08015	6.35mm (1/4") V3 Rubber Union to suit 6.35mm (1/4") SS Tube <i>SS 6.2 ID -- LL 8.9 ID</i>
	L08016	5mm V4 Rubber Union to suit 9.53mm (3/8") SS Tube <i>SS 8.75 ID -- FT 5.2 ID</i>
	JG-TSNIP	Tube Cutting Tool
	CF-70843	Line Meter Pliers
	LQ-COM-0013-SM	Separator (Compression) Tool
	TJ-AAB126ML-F75-80	F75-80 Flange Strainer BSPT 80 Mesh Filter Screen
	TJ-CP15941-4-SSPP	80 Mesh Filter Screen for AA126 Line Strainer
	TJ-CP15941-3-SSPP	50 Mesh Filter Screen for AA126 Line Strainer
	TJ-CP15941-5-SSPP	100 Mesh Filter Screen for AA126 Line Strainer

PART	PART NO.	DESCRIPTION
	LL08003	Manifold
	L08005	Stainless Steel Manifold Lid
	L08066	Manifold Spacer Plate 12mm
	L08071	Manifold Fitting Gasket Seal
	LL08201	3/4" Barb Fitting
	LL08202	3/4" Plug Fitting
	LL08203	3/4" Nipple Fitting
	LQ-LIQ21	3/4" BSP Plug
	L08023	Manifold Mounting Bracket
	L08025	Manifold Landing Plate
	L08029	Manifold Adaptor Bracket

PART	PART NO.	DESCRIPTION
	LL08080	Stacker Pressure Gauge Assembly
	BL-204402-08100 BL-204402-08200	Delivery Tube 8mm OD x 100m Black/Yellow tube Delivery Tube 8mm OD x 200m Black/Yellow tube
	BL-204390-200R	Terminal Tube 5mm x 2.5mm LLDPE Black/Yell For LQS-PTST
	BL-204396-200R	Terminal Tube 6mm x 4.2mm LLDPE Yellow/black For LQS-PTHR
	CF-M12X250 304 SS AT	M12X250 304 SS All Thread Stud
	PR-T006.3BASA	6.35 x 0.91 SS Seamless Tube
	PR-T009.5DASA	9.53 x 1.63 SS Seamless Tube

PART	PART NO.	DESCRIPTION
	L08112	Adaptor Sleeve -fit Air Hose 31-32/39mmOD
	LL08311	Check Valve Saddle - fit Air Hose 38-39mmOD

